



VIDEO GENERATOR

The address decoder outputs the scrollfield write enable signal SFWR, and the microprocessor selects the appropriate RAM pair with address lines ABUS0 and ABUS5.

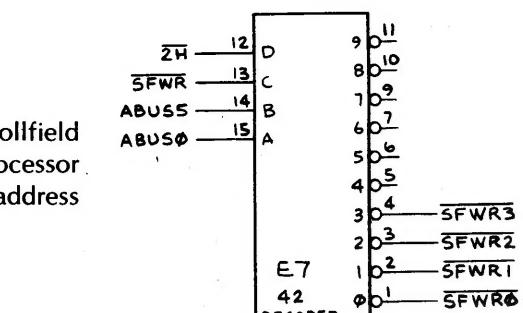

Data Selectors 4, H4, J4 and K4 select the addressing mode for the Video Generator RAM. When 4H is high, the MPU addresses the RAM, via ABUS 0-9. When 4H is low, the Video Generator RAM is addressed by either the scrollfield horizontal address (SFH 3-7) or by the syncman (BH-64H and 16H-128H). 256H determines which of these two addresses the RAM when 4H is low. When 256H is low sync is selected. When 256H is high, scrollfield is selected.

VIDEO GENERATOR RAM

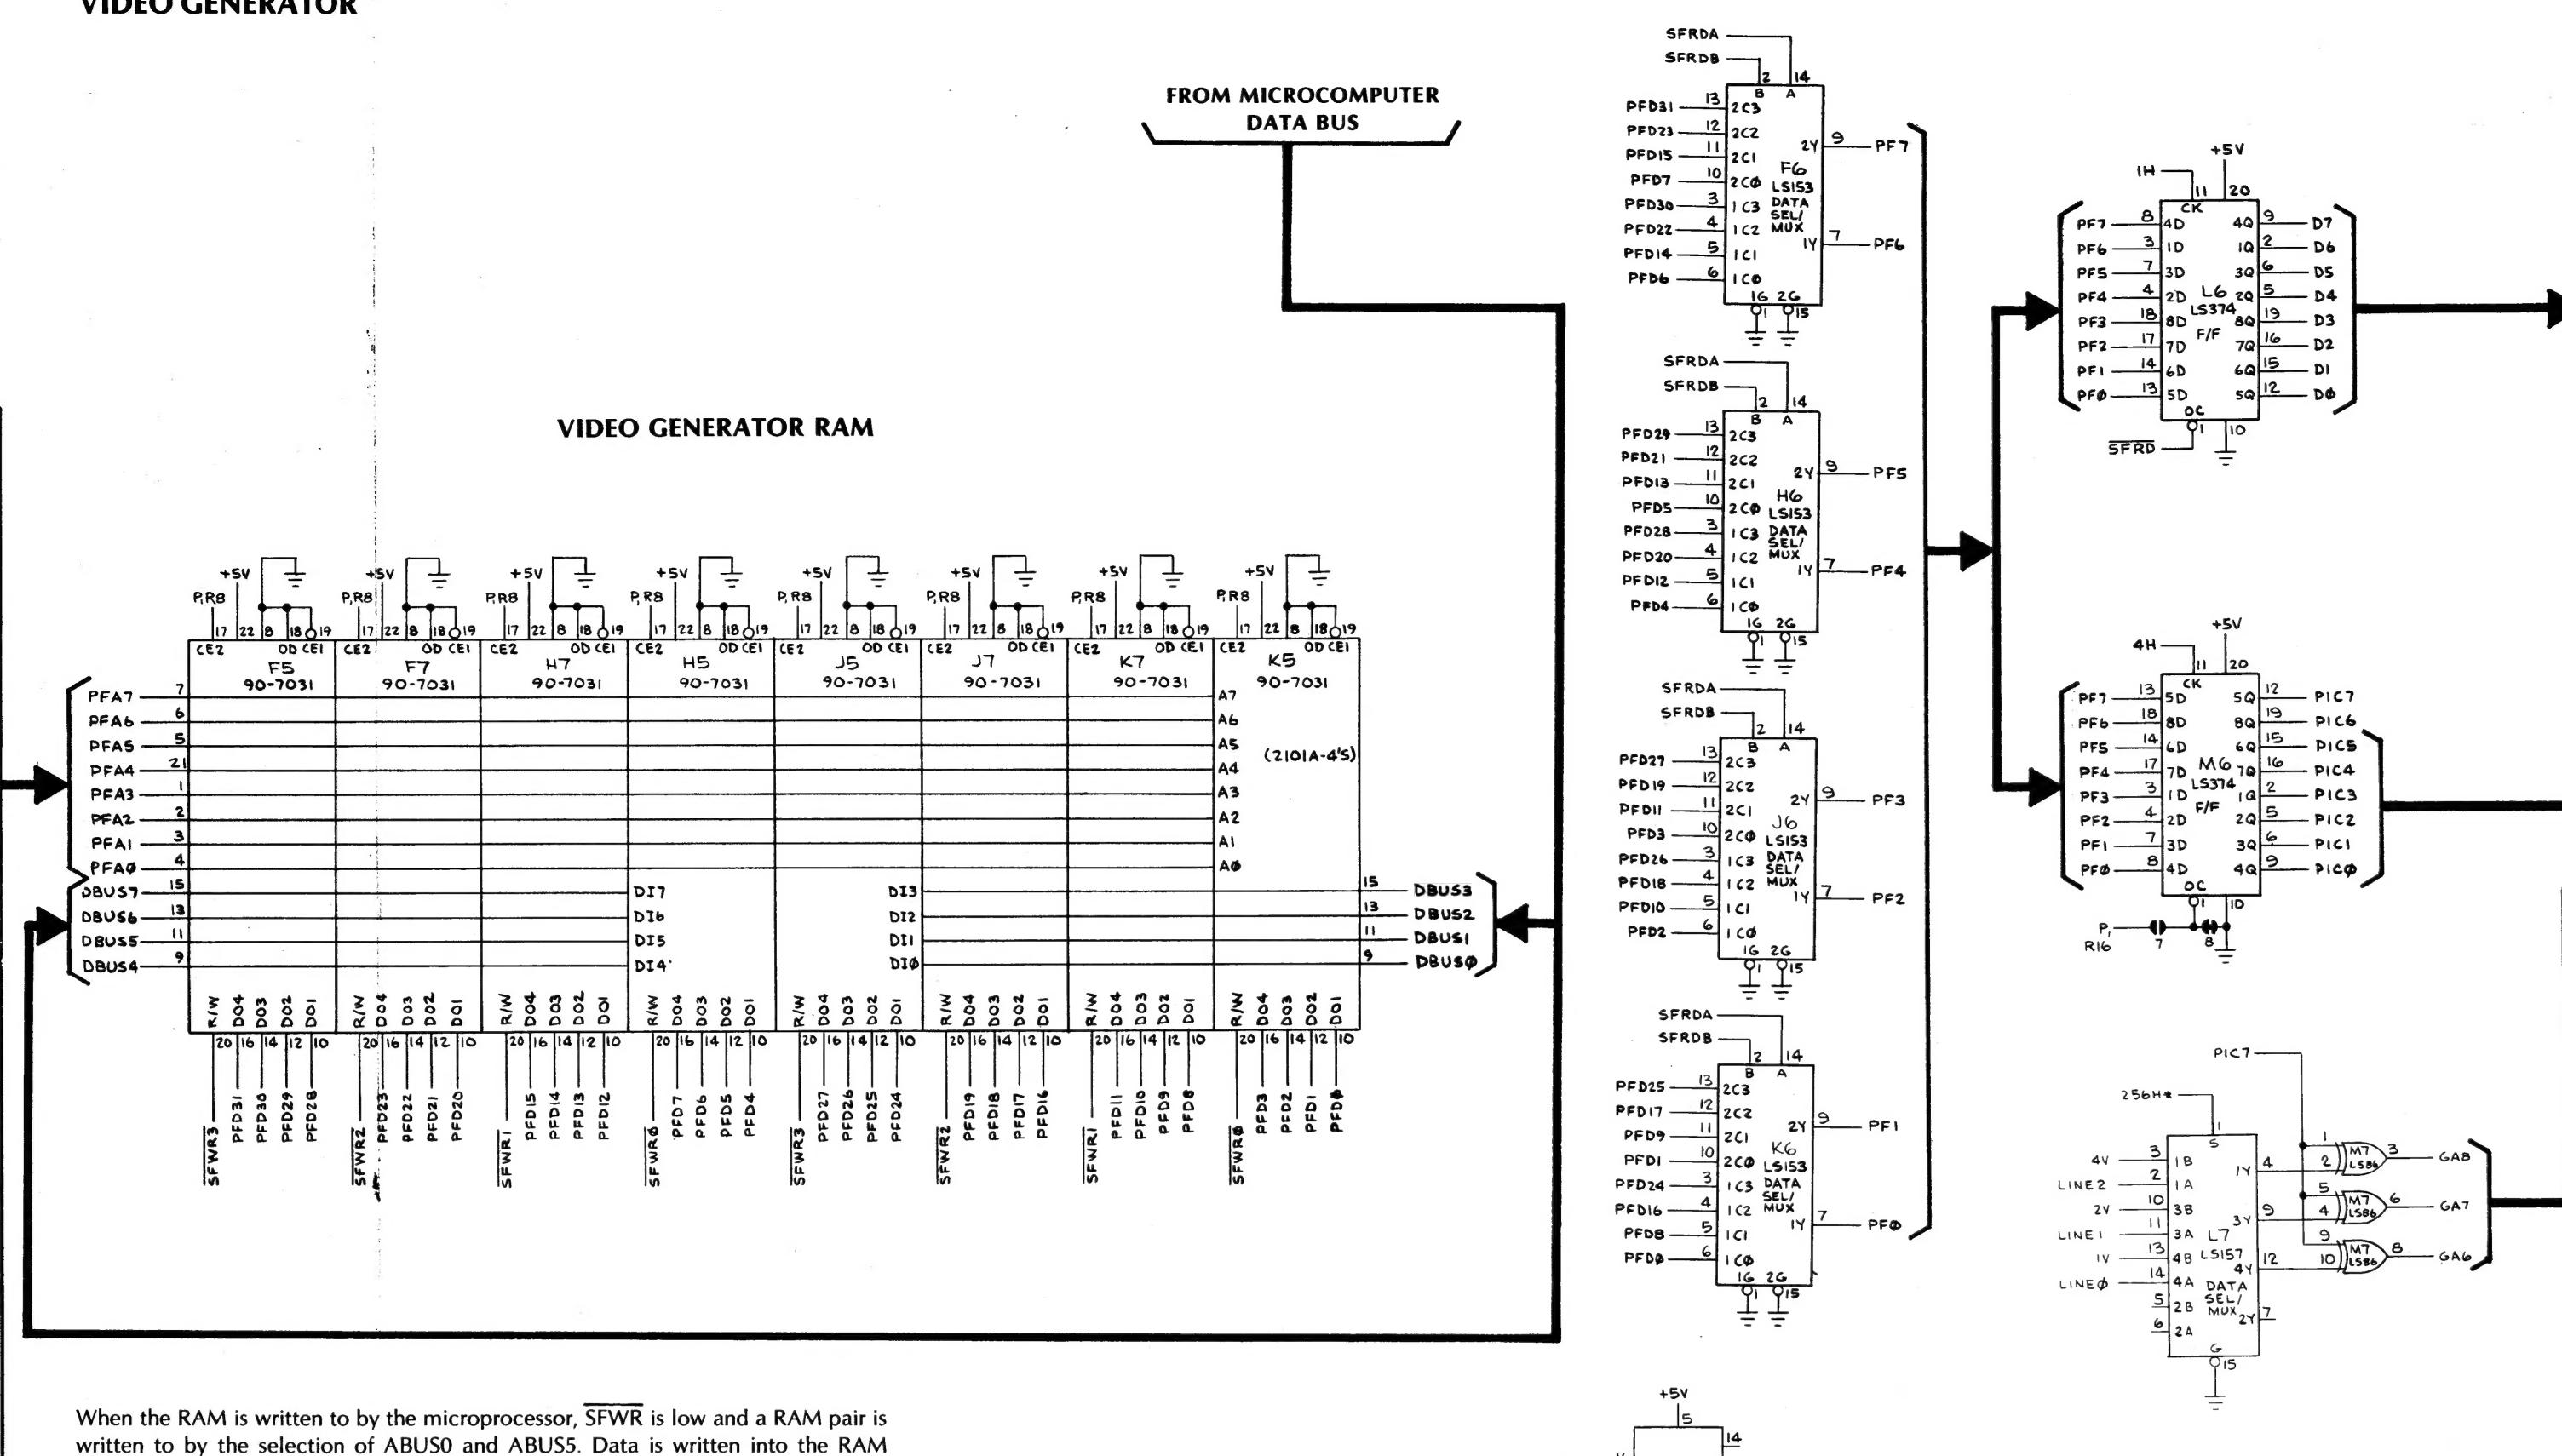


When the RAM is written to by the microprocessor, SFWR is low and a RAM pair is written to by the selection of ABUS0 and ABUS5. Data is written into the RAM thru data bus RAM0 thru DBUS7. Data is read out of the RAM on data lines PF00 thru PF31.


Multiplexer E6 selects the output of the RAM.

The latched data output of D5 is compared with horizontal sync 8H thru 64H, to enable the playfield to scroll (shift) in steps of 8H. SFH0 thru SFH2 selects the scrollfield output from multiplexer C8 in steps of 1H.

ALPHANUMERICS GENERATOR

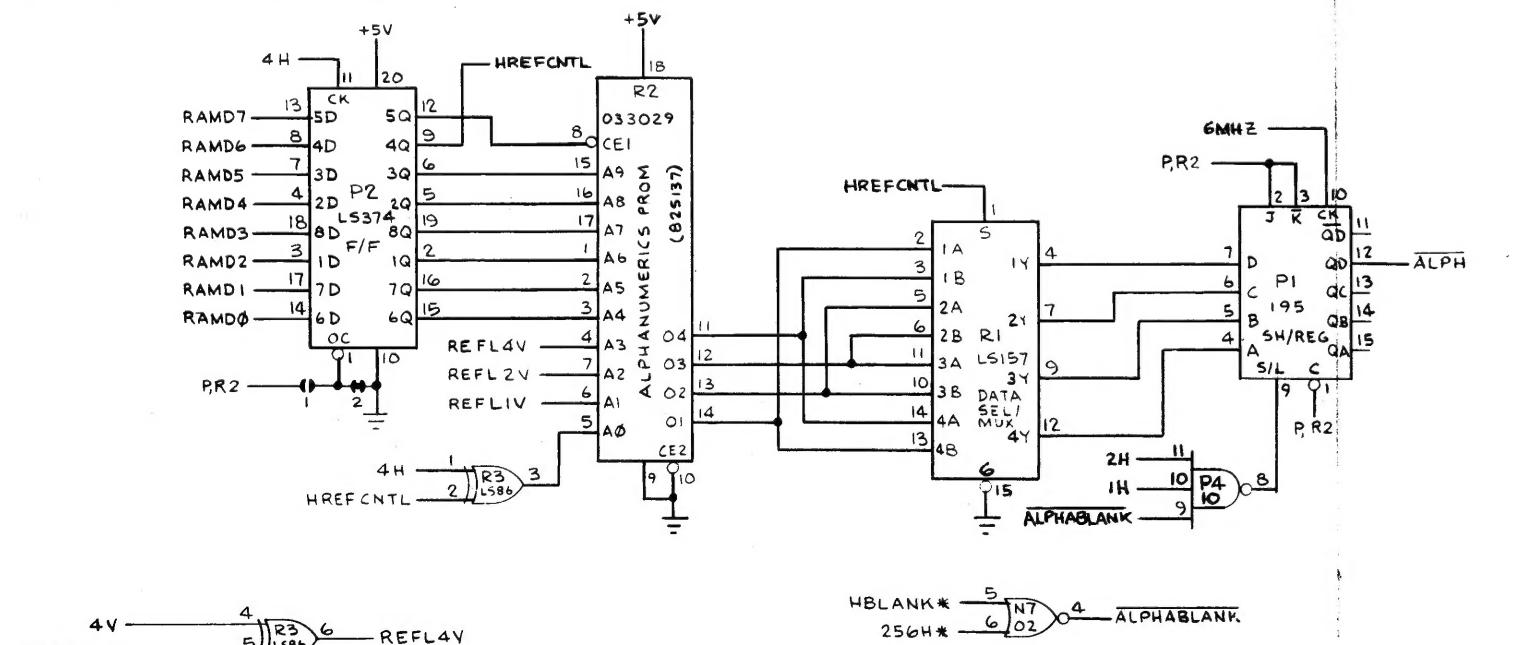


Alphanumeric data is stored in the microcomputer RAM. This information is latched at the output of latch P2 when the microprocessor reads the RAM. Latched RAM data RAM00 thru RAM05 addresses the alphanumeric PROM R2. The RAM07 signal enables the PROM. RAM06 is used to invert (reflect) the data output of the PROM both horizontally and vertically at the output of multiplexer R1. Therefore, the same data output is used at both ends of the monitor. The ALPHABLANK signal ensures that the alphanumeric appears only at each end of the horizontal scan line.

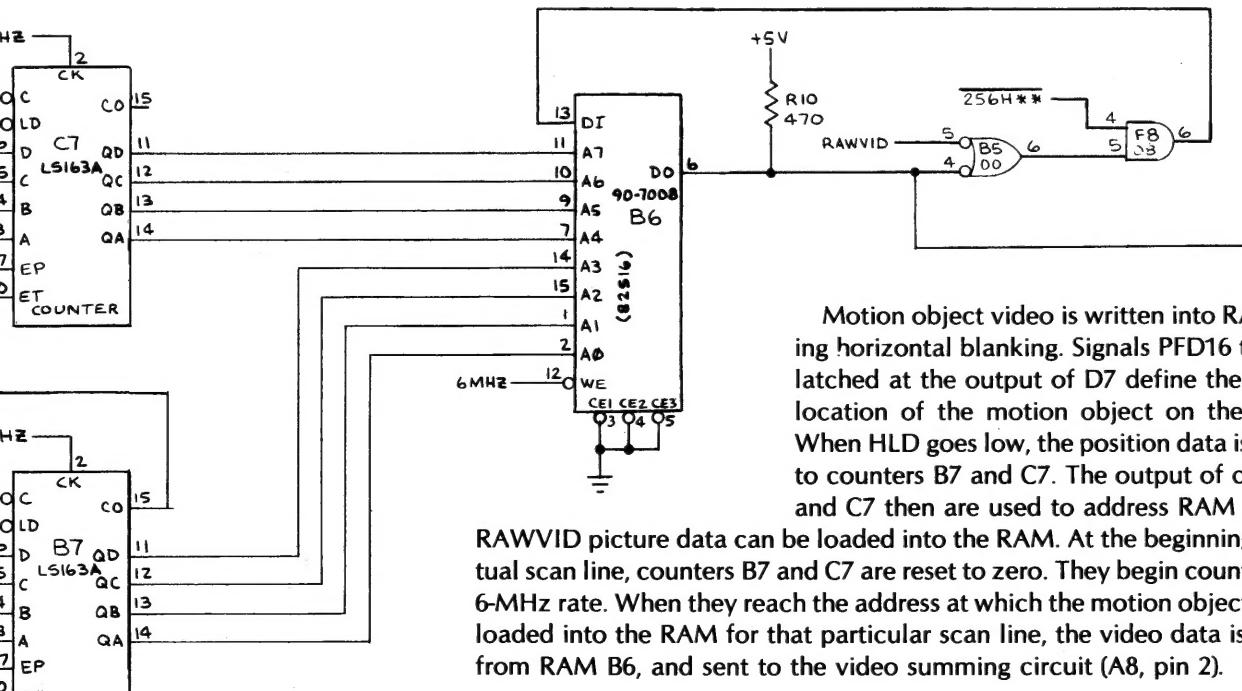

Motion object video is written into RAM B6 during horizontal blanking. Signals PFD16 thru PFD23 latched at the output of D7 define the horizontal location of the motion object on the scan line. When HLD goes low, the position data is loaded into counters B7 and C7. The output of counters B7 and C7 are used to address RAM B6, so that RAWVID picture data can be loaded into the RAM. At the beginning of the actual scan line, counters B7 and C7 are reset to zero. They begin counting up at a 6-MHz rate. When they reach the address at which the motion object video was loaded into the RAM for that particular scan line, the video data is outputted from RAM B6, and sent to the video summing circuit (A8, pin 2).

denotes a test point

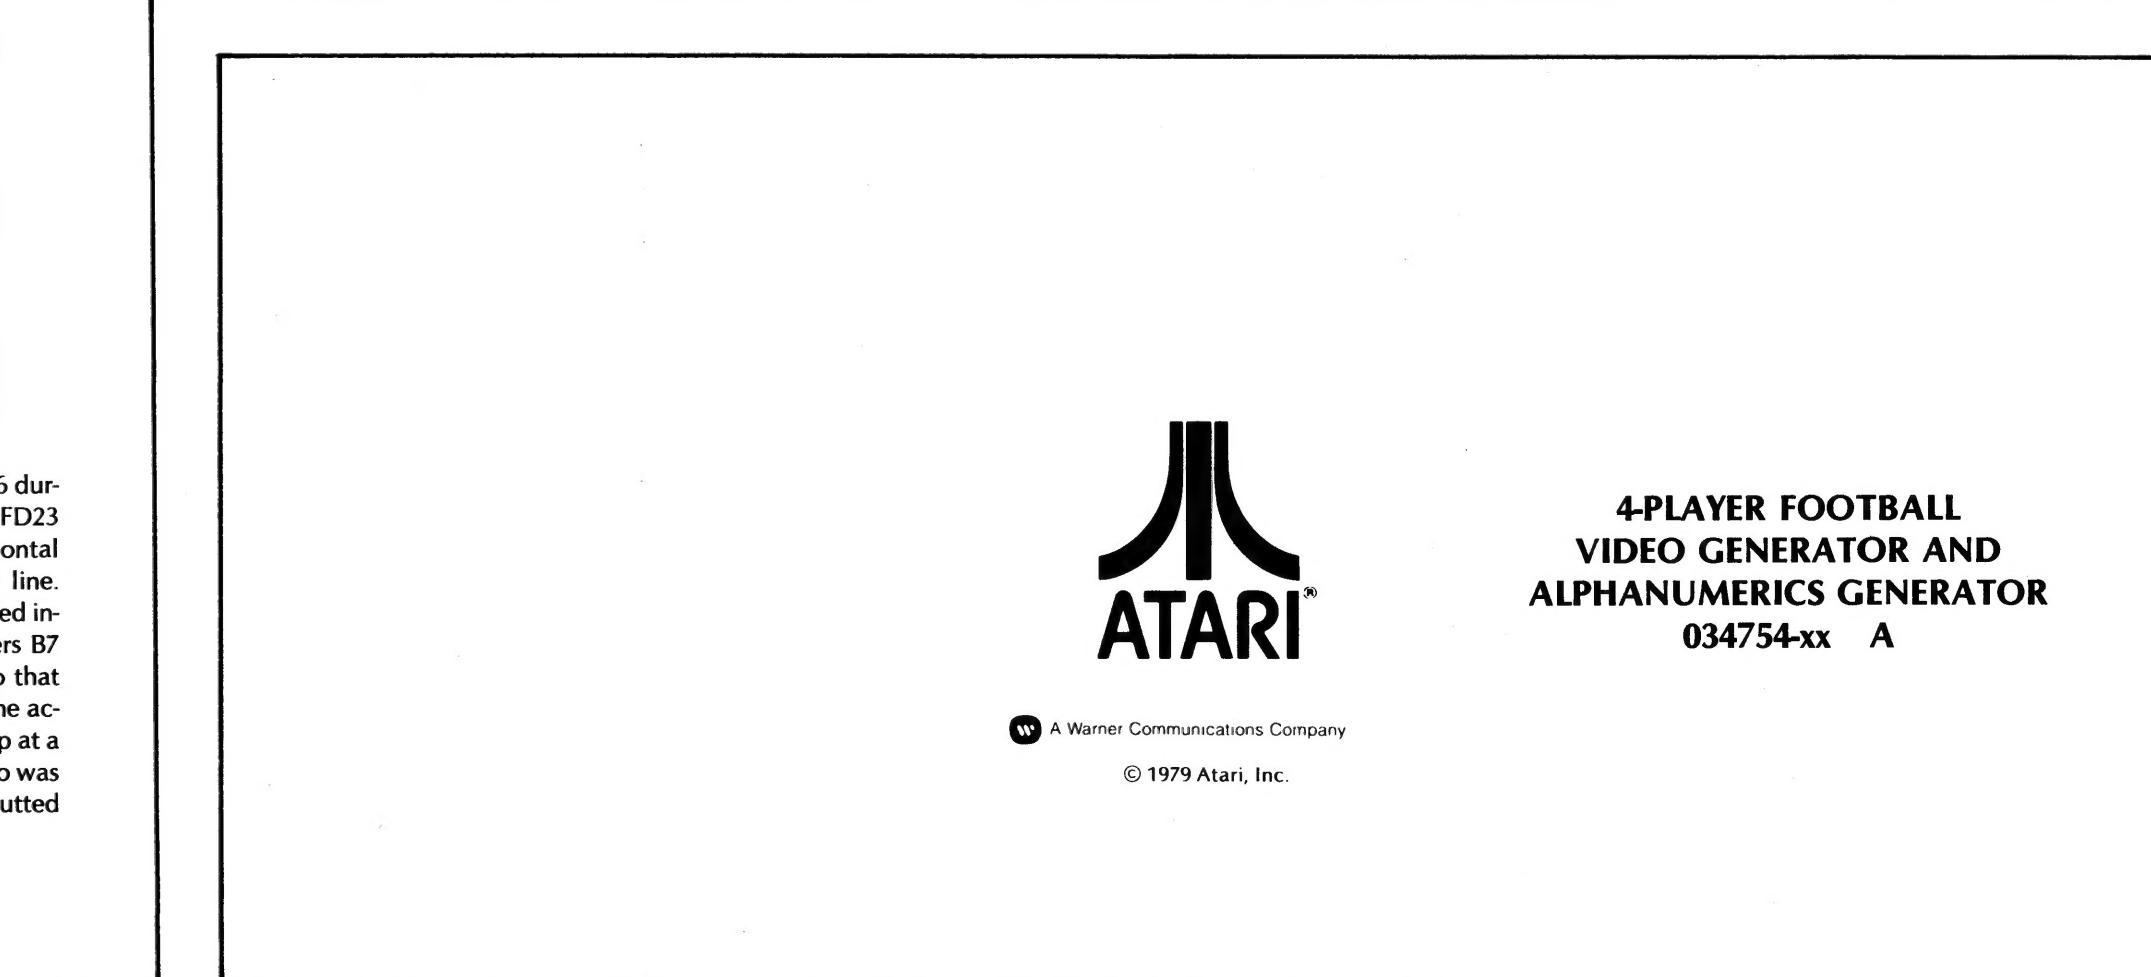

4-PLAYER FOOTBALL
VIDEO GENERATOR AND
ALPHANUMERICS GENERATOR
034754-xx A

© A Warner Communications Company
© 1979 Atari, Inc.